


Shaft (inch)	Outer (mm)	Bearing	Housing
1/2	40	203-008	503
5/8	40	203-010	503
3/4	47	204-012	504
7/8	47	204-014	504
7/8	52	205-014	505
15/16	52	205-015	505
1	52	205-100	505
1 1/16	62	206-101	506
1 1/8	62	206-102	506
1 3/16	62	206-103	506
1 1/4	62	206-104	506
1 1/4	72	207-104	507
1 5/16	72	207-105	507
1 3/8	72	207-106	507
1 7/16	72	207-107	507
1 1/2	80	208-108	508
1 5/8	85	209-110	509
1 11/16	85	209-111	509
1 3/4	85	209-112	509
1 15/16	90	210-115	510
2	100	211-200	511
2 3/16	100	211-203	511
2 1/4	110	212-204	512
2 7/16	110	212-207	512
2 1/2	120	213-208	513
2 11/16	120	213-211	513
(mm)	(mm)		
15	35	202	502
17	40	203	503
20	47	204	504
25	52	205	505
30	62	206	506
35	72	207	507
40	80	208	508
45	85	209	509
50	90	210	510
55	100	211	511
60	110	212	512
65	120	213	513

## SKF Y-Bearings & Housings



**YAR** →

Inner ring extended on both sides.  
Locked by two grub screws in inner ring extension.

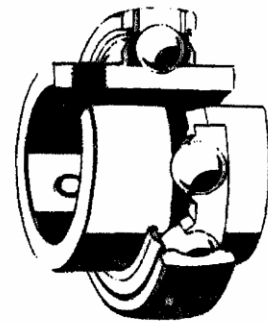


← **YET**

Inner ring extended on both sides. Eccentric locking collar.

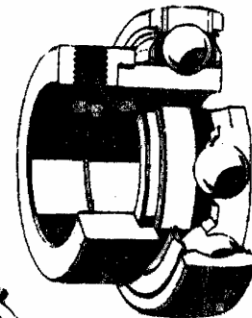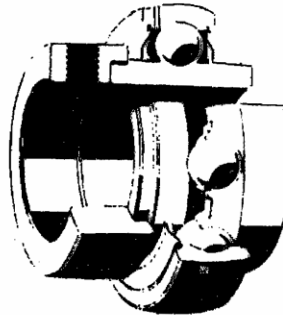

**YEL** →


Inner ring extended on one side.  
Eccentric locking collar.

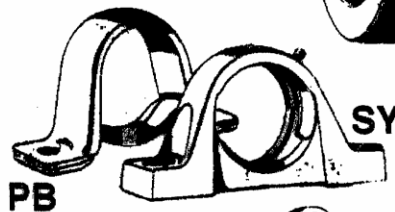

**PB**

**FYM**

**FY**

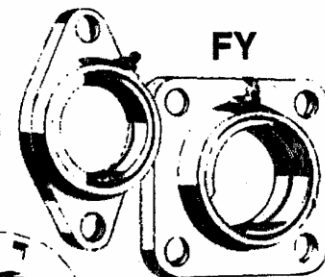

**TU**

**PF**

